

RUGER GP100 TWISTER GRIPS - RUGER GP100, TWISTER, BLACK GREY

[Handgun Parts](#) > [Grip Parts](#) > [Grips](#)

A milder texture with deep grooves that's great for concealed carry. Designed for the Ruger GP100. T-15 Screw Included.



Attributes

- Name: [RUGER GP100, TWISTER, BLACK GREY](#)
- Manufacturer: [VZ GRIPS](#)
- Product no.: 100047255
- Mfr. No.: RUGGP100TWISTE
- Color: Black/Gray
- Make: Ruger
- Material: G-10
- Model: GP100
- Delivery weight: 0.181kg
- Shipping height: 89mm
- Shipping width: 33mm
- Shipping length: 188mm
- UPC: 691327686284

Item details

Made in USA

US export classification: 0A501.y.1

Table of Contents

- [Startpage](#)
- [RUGER GP100 TWISTER GRIPS Safety Instruction Guide](#)
- [About Us](#)

RUGER GP100 TWISTER GRIPS Safety Instruction Guide

Introduction

Thank you for choosing the RUGER GP100 TWISTER GRIPS. This guide provides essential safety instructions and guidelines to ensure the safe use and maintenance of your grips. Please read this manual carefully before installation and use.

General Safety Guidelines

- Ensure that the grips are compatible with your Ruger GP100 model before installation.
- Always handle your firearm responsibly and in accordance with local laws and regulations.
- Keep the grips and firearm out of reach of children and unauthorized users.
- Regularly inspect the grips for signs of wear or damage. If any issues are found, discontinue use immediately.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Use the grips only as intended. They are designed specifically for the Ruger GP100 model.
- Avoid using the grips in any manner that could compromise the safety of the firearm.
- Be cautious when handling the firearm, especially when loading or unloading.
- Ensure that the firearm is pointed in a safe direction at all times during use.
- If you experience any discomfort or difficulty while using the grips, stop using them immediately.

Instructions for Installation and Usage

1. Installation:

- Ensure that your Ruger GP100 is unloaded before beginning the installation process.
- Use the provided T15 screw to securely attach the grips to your firearm.
- Tighten the screw until the grips are firmly in place but avoid overtightening, which may damage the grips or firearm.
- Check that the grips are properly aligned and securely attached before using the firearm.

2. Usage:

- Grip the firearm firmly but comfortably to maintain control during use.
- Regularly clean the grips with a soft cloth to maintain their appearance and functionality.
- Store the firearm in a safe place when not in use, ensuring that the grips are protected from excessive moisture and extreme temperatures.

Disposal Instructions

- When disposing of the grips, follow local regulations regarding electronic and hazardous waste.
- Do not dispose of the grips in regular household waste if they contain any hazardous materials.
- Consider recycling options where available to minimize environmental impact.

Contact Information for Further Support

For any safety inquiries or support regarding the RUGER GP100 TWISTER GRIPS, please refer to the

manufacturer's contact information provided with your product.

Thank you for prioritizing safety and responsible use. Enjoy your RUGER GP100 TWISTER GRIPS!

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at