

LONG RANGER 308 WINCHESTER RIFLE MAGAZINE - HENRY REPEATING ARMS LONG RANGER 308 WINCHESTER 4 ROUND MAGAZINE BLACK

[Magazines](#) > [Rifle Magazines](#) > [Magazines](#)

Replacement/spare 4 round magazine for the Henry Long Ranger in 308 Winchester.



Attributes

- Name: [HENRY REPEATING ARMS LONG RANGER 308 WINCHESTER 4 ROUND MAGAZINE BLACK](#)
- Manufacturer: [HENRY REPEATING ARMS](#)
- Product no.: 430109384
- Mfr. No.: H14-308 MAG
- Capacity: 4-Round
- Cartridge: 308 Winchester
- Finish: Black
- Model: Long Ranger
- Weapon type: Henry
- Delivery weight: 0.113kg
- UPC: 619835601384

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- [Startpage](#)
- [LONG RANGER 308 WINCHESTER RIFLE MAGAZINE SAFETY INSTRUCTIONS](#)
- [About Us](#)

LONG RANGER 308 WINCHESTER RIFLE MAGAZINE SAFETY INSTRUCTIONS

Introduction

Thank you for purchasing the LONG RANGER 308 WINCHESTER RIFLE MAGAZINE from Henry Repeating Arms. This document provides important safety instructions and guidelines to ensure the safe and proper use of your magazine. Please read this guide carefully and keep it for future reference.

General Safety Guidelines

- Always treat your firearm and magazine as if they are loaded.
- Store your magazine and firearm in a secure location, out of reach of children and unauthorized users.
- Inspect the magazine regularly for signs of wear or damage. Do not use a damaged magazine.
- Follow all local laws and regulations regarding firearm and magazine use.
- Ensure that your magazine is compatible with your firearm model.

Specific Safety Precautions for Use

- Only use the LONG RANGER 308 WINCHESTER magazine with the Henry Long Ranger rifle.
- Do not attempt to modify the magazine in any way.
- Always load and unload your magazine in a safe environment, free from distractions.
- Keep your finger off the trigger until you are ready to shoot.
- Be aware of your surroundings and ensure that you have a clear line of sight when using your firearm.

Instructions for Installation and Usage

1. Installation:

- Ensure the firearm is unloaded before installing the magazine.
- Align the magazine with the magazine well of the rifle.
- Push the magazine firmly into place until you hear a click, indicating it is securely attached.

2. Loading the Magazine:

- Hold the magazine with the opening facing upwards.
- Insert cartridges into the magazine one at a time, ensuring they are seated properly.
- Do not exceed the magazine capacity of 4 rounds.

3. Using the Magazine:

- Insert the loaded magazine into the rifle as described in the installation section.
- Ensure the magazine is locked in place before attempting to fire the rifle.
- To remove the magazine, press the magazine release button and gently pull the magazine out.

4. Unloading the Magazine:

- Remove the magazine from the rifle.
- Push the cartridges out of the magazine one at a time, or allow them to fall out by turning the magazine upside down.

Disposal Instructions

- Dispose of any damaged or worn magazines in accordance with local regulations.
- Do not throw magazines in regular trash. Contact local authorities for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or further assistance regarding your LONG RANGER 308 WINCHESTER RIFLE MAGAZINE, please reach out to the designated EU contact point provided with your purchase. Always refer to the official Henry Repeating Arms website for the latest updates and information.

Conclusion

Following these safety instructions will help ensure a safe and enjoyable experience with your LONG RANGER 308 WINCHESTER RIFLE MAGAZINE. Always prioritize safety and compliance with local laws. Thank you for choosing Henry Repeating Arms.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk