


DIRTY BIRD LUCKY SHOT BOWLING PINS 12 X 18" TARGETS - BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOWLING PINS 12 X 18" TARGETS 6 PACK

[Shooting Accessories](#) > [Targets & Accessories](#) > [Paper Targets](#)

BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOWLING PINS 12 X 18"
TARGETS FEATURES: Spot your shots easily? Intense splatter offers superior
downrange contrast? Great targets for all types of pistol-action shooting?
Heavy tagboard construction 12" x 18"? 6 Pack

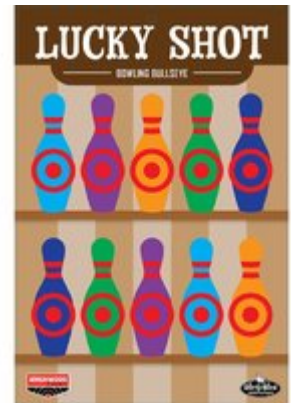

Attributes

- Name: [BIRCHWOOD CASEY DIRTY BIRD LUCKY SHOT BOWLING PINS 12 X 18" TARGETS 6 PACK](#)
- Manufacturer: [BIRCHWOOD CASEY](#)
- Product no.: 430114042
- Mfr. No.: BC-35773
- Style: Bullseye
- Target Size/Type: Large 12 to 20
- Type: Papers
- Quantity: 6
- Delivery weight: 0.295kg
- Shipping height: 317mm
- Shipping width: 463mm
- Shipping length: 30mm
- UPC: 888151076552

Table of Contents

- [Startpage](#)
- [DIRTY BIRD LUCKY SHOT BOWLING PINS Safety Instructions](#)
- [About Us](#)

DIRTY BIRD LUCKY SHOT BOWLING PINS Safety Instructions

Introduction

Thank you for choosing the DIRTY BIRD LUCKY SHOT BOWLING PINS. This product is designed for safe and enjoyable use in various shooting activities. Please read this safety instruction guide carefully to ensure you understand the proper usage and safety measures associated with this product.

General Safety Guidelines

- Ensure the product is used in a safe environment, away from people and animals.
- Always wear appropriate eye and ear protection when shooting.
- Follow all local laws and regulations regarding shooting and target practice.
- Inspect the product for any damage before use. Do not use if damaged.
- Keep the product out of reach of children and vulnerable individuals.

Specific Safety Precautions for Use

- Use only in designated shooting areas that comply with safety regulations.
- Ensure that the target is securely placed and stable before shooting.
- Avoid shooting at the target from an unsafe distance; maintain a safe shooting range.
- Do not use the target for any purpose other than its intended use.
- Be aware of your surroundings and ensure no one is in the line of fire.
- Do not attempt to retrieve arrows or bullets from the target until you are certain it is safe to do so.

Instructions for Installation and Usage

1. Installation:

- Select a suitable location for the target, ensuring it is stable and secure.
- Position the target at a safe distance according to your shooting capabilities.
- If using a stand or holder, ensure it is properly assembled and stable.

2. Usage:

- Before shooting, confirm that the area is clear of people and obstacles.
- Load your firearm according to the manufacturer's instructions.
- Aim carefully at the target and fire only when you are ready.
- After shooting, wait for a signal or ensure that all firearms are secure before approaching the target.

Disposal Instructions

- Dispose of the target in accordance with local waste disposal regulations.
- Recycle materials if possible; check with local recycling programs for guidelines.
- Do not burn the target or any packaging materials.

Contact Information for Further Support

For any safety inquiries or concerns regarding the DIRTY BIRD LUCKY SHOT BOWLING PINS, please reach out to the designated EU contact point provided with your product packaging or documentation.

Conclusion

By following these safety instructions, you can ensure a safe and enjoyable experience with your DIRTY BIRD LUCKY SHOT BOWLING PINS. Always prioritize safety and responsibility in your shooting activities. Thank you for your attention to these important guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk