

DECAP ROD ASSEMBLIES - REDDING DECAP ROD ASSEMBLY

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Includes decapping pin and expander ball Replacement decap rod assembly for Redding sizing dies.



Attributes

- Name: [REDDING DECAP ROD ASSEMBLY](#)
- Manufacturer: [REDDING](#)
- Product no.: 749002283
- Mfr. No.: 32923
- Cartridge: 218 Bee,22K Hornet,22 Hornet
- Delivery weight: 0.045kg
- Shipping height: 1mm
- Shipping width: 102mm
- Shipping length: 152mm
- UPC: 611760329234

Item details

Made in USA

Table of Contents

- Startpage
- DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY Safety Instruction Guide
- About Us

DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY Safety Instruction Guide

Introduction

Thank you for choosing the DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY. This product is designed to enhance your reloading experience by providing a reliable replacement decap rod assembly for Redding sizing dies. It includes a decapping pin and an expander ball. To ensure safe and effective use of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always use this product in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the product before each use for any signs of damage or wear.
- Do not use the product if it is damaged or malfunctioning.
- Report any unsafe conditions or accidents to the appropriate authorities.
- Check for product recalls on the EU Safety Gate platform regularly.

Specific Safety Precautions for Use

- Ensure you are using the correct decap rod assembly for your specific cartridge types: 22 Hornet, 218 Bee, and 22K Hornet.
- Always wear appropriate eye protection when using reloading equipment.
- Handle all reloading components with care to avoid accidents.
- Avoid distractions while operating reloading equipment.
- Follow all local laws and regulations regarding reloading practices.

Instructions for Installation and Usage

1. Installation:

- Gather all necessary tools and components for installation.
- Ensure your reloading press is secure and stable before beginning the installation.
- Remove the old decap rod assembly from the sizing die.
- Insert the new DECAP ROD ASSEMBLY into the sizing die, ensuring it is seated properly.
- Tighten any screws or fasteners as necessary to secure the assembly in place.

2. Usage:

- Set up your reloading press according to the manufacturer's instructions.
- Insert the cartridge into the sizing die with the installed decap rod assembly.
- Operate the press smoothly and steadily to decap the cartridge.
- After use, remove the cartridge and inspect the decap pin for any signs of wear or damage.

Disposal Instructions

- Dispose of any damaged or worn parts according to local regulations.
- Recycle packaging materials where possible.
- Do not dispose of the product in regular household waste; follow local disposal guidelines for hazardous materials if applicable.

Contact Information for Further Support

For any inquiries regarding the DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY, please consult the manufacturer's official website or customer support resources to ensure you receive the most accurate and up-to-date information.

By following these safety instructions, you can ensure a safe and effective reloading experience with the DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY. Thank you for your attention to safety and compliance with the EU General Product Safety Regulation.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk