

Flare and Expander Die (.45 ACP)

Optimize your reloading process with the Flare and Expander Die. It expands the case neck to ensure proper bullet fit and consistent neck tension, which are vital for accurate seating. Additionally, the die applies a precise flare to the case mouth, preventing bullet shaving and facilitating smooth bullet placement. Engineered with standard 7/8-14 threads, it is compatible with most reloading presses and is ideal for setups requiring dedicated case expansion and flaring.



Attributes

- Name: Flare and Expander Die (.45 ACP)
- Manufacturer: ARMANOV
- Product no.: EU2018350
- Mfr. No.: FLEXDIE45
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [English: Flare and Expander Die Safety Instructions](#)

Flare and Expander Die Safety Instructions

Introduction

Thank you for choosing the Flare and Expander Die (.45 ACP). This product is designed to enhance your reloading process by ensuring proper bullet fit and consistent neck tension. This safety instruction guide provides essential safety information, usage guidelines, and contact information for further support, ensuring compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- **Product Safety:** This product is designed for safe use. Ensure you follow all safety instructions to avoid accidents.
- **Enhanced Recalls:** Stay informed about any recalls by checking official sources regularly.
- **Online Shopping:** If purchased online, ensure the platform meets safety requirements.
- **Special Consumer Focus:** Keep this product out of reach of children and vulnerable individuals.
- **EU Contact Point:** For safety inquiries, refer to the manufacturer's contact point in the EU.
- **Rapid Alerts:** Monitor updates on unsafe products through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Always wear appropriate safety gear when using the Flare and Expander Die, including safety glasses and gloves.
- Ensure that the reloading press is securely mounted and stable before use.
- Do not exceed the recommended specifications for the die and the cartridges being reloaded.
- Keep the workspace clean and organized to prevent accidents.
- Avoid distractions while using the die to maintain focus on the task.
- Do not use the die for any purpose other than intended reloading applications.

Instructions for Installation and Usage

1. Installation:

- Ensure the reloading press is turned off and unplugged.
- Remove any existing dies from the press.
- Thread the Flare and Expander Die into the press using standard 7/814 threads. Tighten securely but do not overtighten.
- Adjust the die to the desired height based on the case length specifications.

2. Usage:

- Prepare your brass cases by cleaning and inspecting them for any damage.
- Insert the case into the reloading press and raise the ram to engage the die.
- The die will expand the case neck and apply a flare at the case mouth.
- After flaring, inspect the case to ensure proper expansion and flare.
- Repeat the process for each case as needed.
- Always follow the reloading data and guidelines for your specific bullet and powder combination.

Disposal Instructions

- Dispose of any unused or damaged components according to local regulations.
- Do not throw the die or any related materials in regular household waste.
- Check with local waste management authorities for proper disposal methods for reloading components.

Contact Information for Further Support

For any questions or concerns regarding the Flare and Expander Die (.45 ACP), please refer to the manufacturer's contact information available on their official website or product packaging.

By following these safety instructions, you can ensure a safe and effective reloading experience with the Flare and Expander Die. Thank you for your attention to safety.