

Flare and Expander Die (9mm / .38 Super)

[Reloading](#) > [Reloading Dies](#) > [Neck Size Bushings](#)

Optimize your reloading process with the Flare and Expander Die. It expands the case neck to ensure proper bullet fit and consistent neck tension, which are vital for accurate seating. Additionally, the die applies a precise flare to the case mouth, preventing bullet shaving and facilitating smooth bullet placement. Engineered with standard 7/8-14 threads, it is compatible with most reloading presses and is ideal for setups requiring dedicated case expansion and flaring.



Attributes

- Name: [Flare and Expander Die \(9mm / .38 Super\)](#)
- Manufacturer: [ARMANOV](#)
- Product no.: EU2018351
- Mfr. No.: FLEXDIE9MM
- Colour: Silver
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- [Startpage](#)
- [Flare and Expander Die Safety Instruction Guide](#)
- [About Us](#)

Flare and Expander Die Safety Instruction Guide

Introduction

Thank you for choosing the Flare and Expander Die (9mm / .38 Super). This product is designed to optimize your reloading process by ensuring proper bullet fit and consistent neck tension. It is essential to follow the safety guidelines and instructions provided in this manual to ensure safe and effective use of the product.

General Safety Guidelines

To ensure your safety and the safety of others, please adhere to the following guidelines:

- Always read and understand the product instructions before use.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose.
- Inspect the product regularly for any signs of damage or wear.
- Avoid using the product in wet or damp conditions.
- Do not attempt to modify or repair the product yourself.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

When using the Flare and Expander Die, please consider the following safety precautions:

- Ensure that the reloading press is securely mounted and stable before use.
- Wear appropriate safety gear, including safety glasses and gloves, to protect against debris and sharp edges.
- Keep hands and loose clothing away from moving parts during operation.
- Use the die only with compatible cartridges as specified in the product description.
- Do not exceed the recommended load specifications for your reloading process.
- If you notice any unusual noise or vibration during use, stop immediately and inspect the product.

Instructions for Installation and Usage

Follow these steps for the proper installation and usage of the Flare and Expander Die:

1. Installation

- Ensure that your reloading press is turned off and unplugged.
- Locate the standard 7/814 threads on the Flare and Expander Die.
- Thread the die into the reloading press securely, ensuring it is properly aligned.
- Tighten the die using a wrench if necessary, but avoid overtightening.

2. Usage

- Prepare your cases by cleaning and inspecting them for damage.
- Insert a case into the reloading press and raise the ram to meet the die.
- Adjust the die to achieve the desired flare and neck expansion by turning the die body.
- Lower the ram to complete the expansion process.
- Remove the case and inspect the flare and neck tension for consistency.
- Repeat the process for additional cases as needed.

Disposal Instructions

When the Flare and Expander Die reaches the end of its life cycle or is no longer needed, please dispose of it responsibly:

- Check local regulations for proper disposal methods for metal products.
- If applicable, recycle the die according to local recycling guidelines.
- Do not dispose of the die in regular household waste.

Contact Information for Further Support

For any questions or concerns regarding the Flare and Expander Die, please refer to the manufacturer's contact information provided with your product. It is essential to have access to support for safety inquiries and product assistance.

Thank you for your attention to these safety instructions. Enjoy your reloading experience with the Flare and Expander Die!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk